

F-BBU BATTERY BACK-UP UNIT

INSTRUCTION MANUAL

UL325-2010 Compliant

READ ALL INSTRUCTION FIRST


Instruction for F-BBU

Warning:

- 1. This F-BBU battery backup is designed for "UL325-2010" wiring.
- 2. If operator is UL325-2010 version, see drawing F-BBU-07A4.
- 3. If operator is Wireless Edge version, see drawing <u>F-BBU-07A1</u>.
- 4. If operator is Updated '07 version, **DO NOT** connect TB10 (41). See drawing F-BBU-07A2.
- 5. If the operator is the older version, **DO NOT** connect TB10 (41), TB10 (42) & TB10 (43). See drawing <u>F-BBU-07A3</u>.
- 6. If operator wiring needs to be changed to UL325-2010 version, please contact manufacturer for details.

Warning: Disconnect power at fuse box before proceeding with any wiring.


- 1. Lower door to closed position.
- 2. Disconnect power to the operator.
- 3. Remove alarm connection TB5 (11) & (12).
- 4. Remove operator jumper TB5 (7) & (8).
- 5. Jump operator TB5 (13) & (14).
- 6. Jump operator TB5 (20) & (21).
- 7. Connect F-BBU unit to the operator (see drawing F-BBU-07A4, F-BBU-07A1, F-BBU-07A2 & F-BBU-07A3).
- 8. Turn battery switch to "OFF".
- 9. Connect "Dry Contact" alarm to TB11.
- 10. Connect battery red sockets.
- 11. Connect power to F-BBU.
- 12. Connect power to the operator.
- 13. Turn battery switch to "ON".

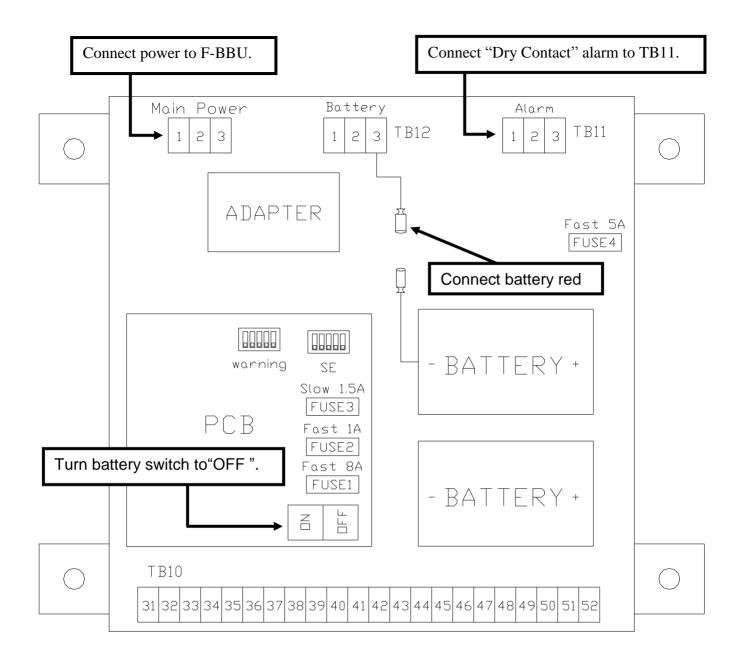

Warning: Before replacing fuse or battery, turn off power to F-BBU and turn battery switch to "OFF". Must replace with same fuse, use wrong fuse will cause the relative component damage.


F-BBU-07

Front Panel Display

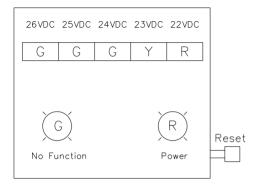



Note:


- 1. Red light will go off when power drops below 20VDC.
- 2. When red light goes off press "RESET" button or replace battery .

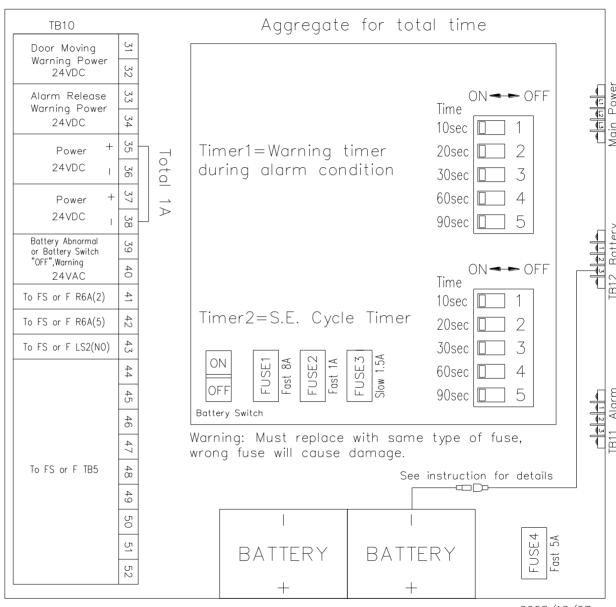


2008/10/27

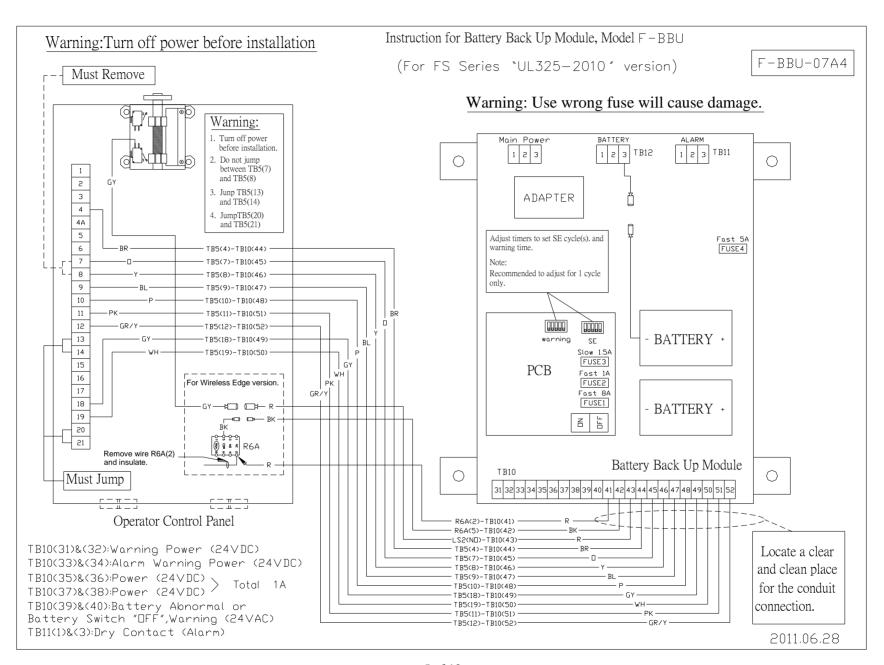

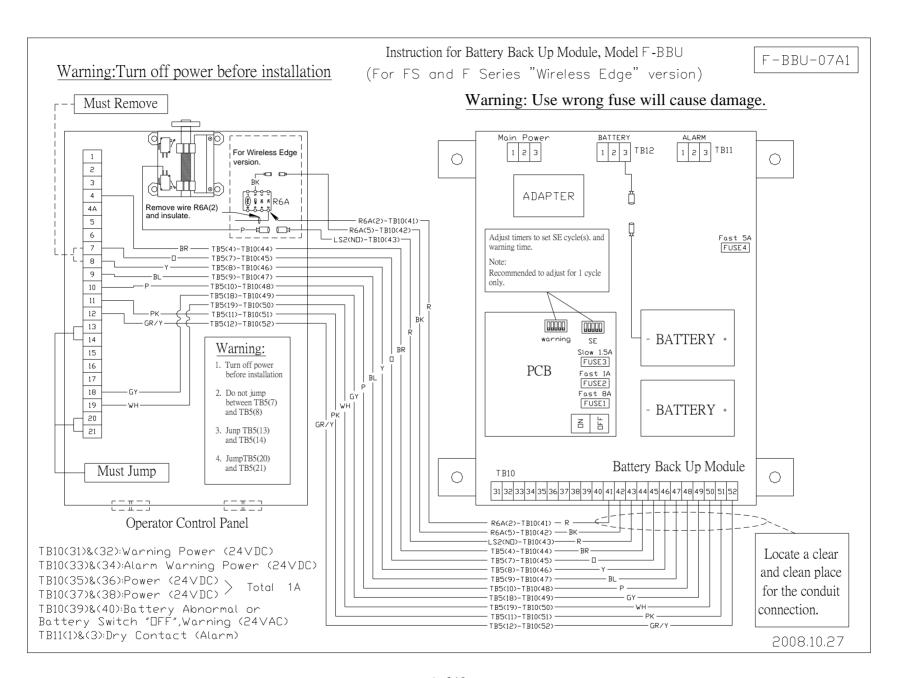


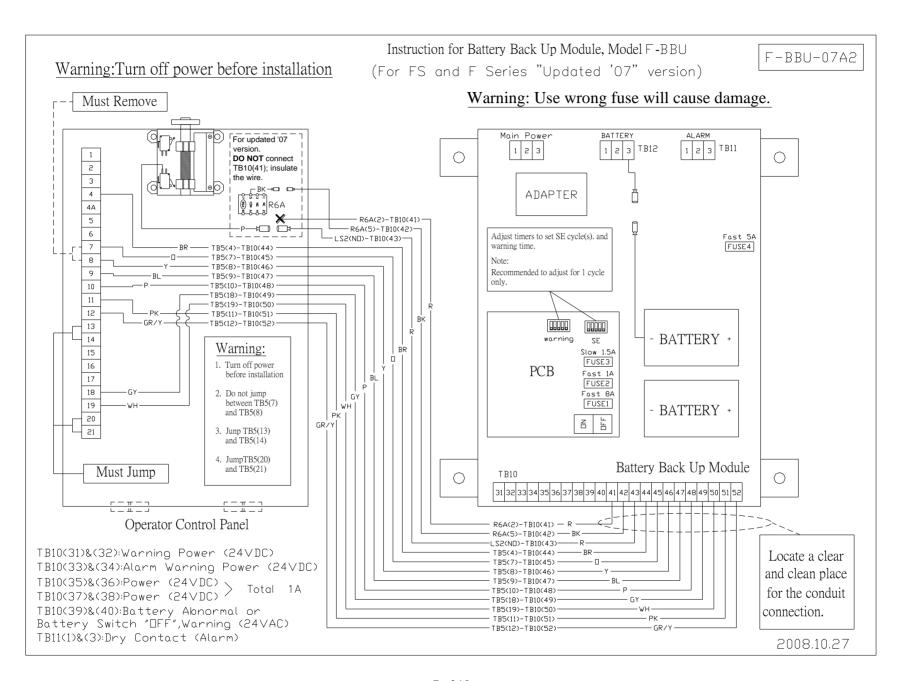


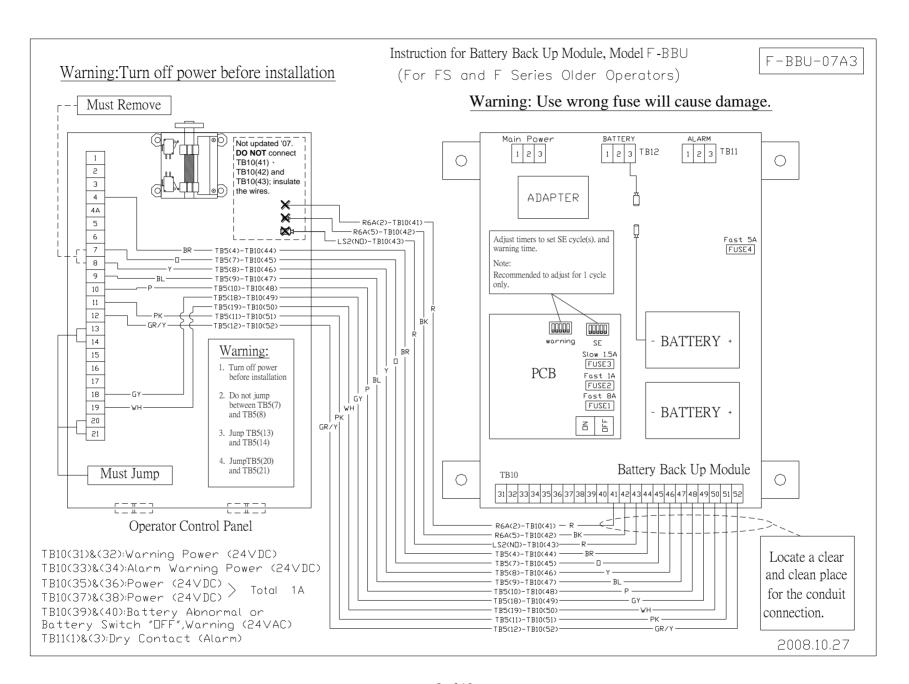



Battery Back Up Module F-BBU Schematic.

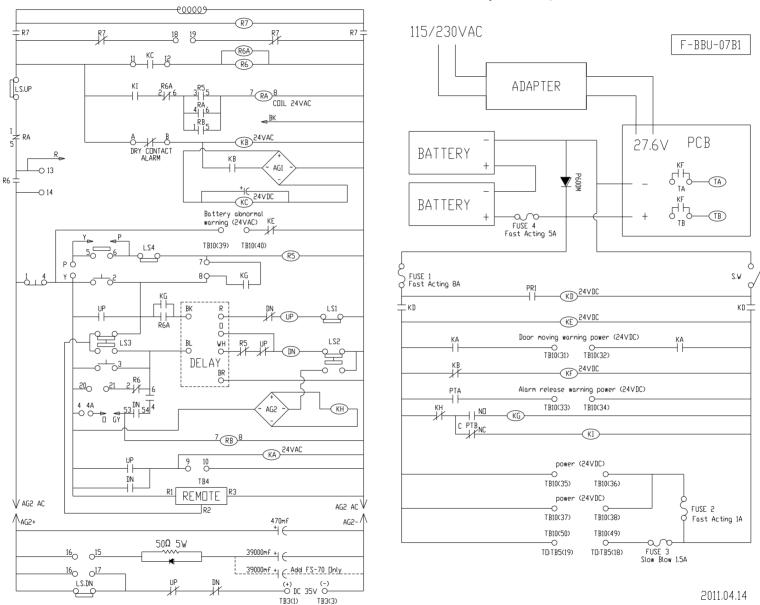

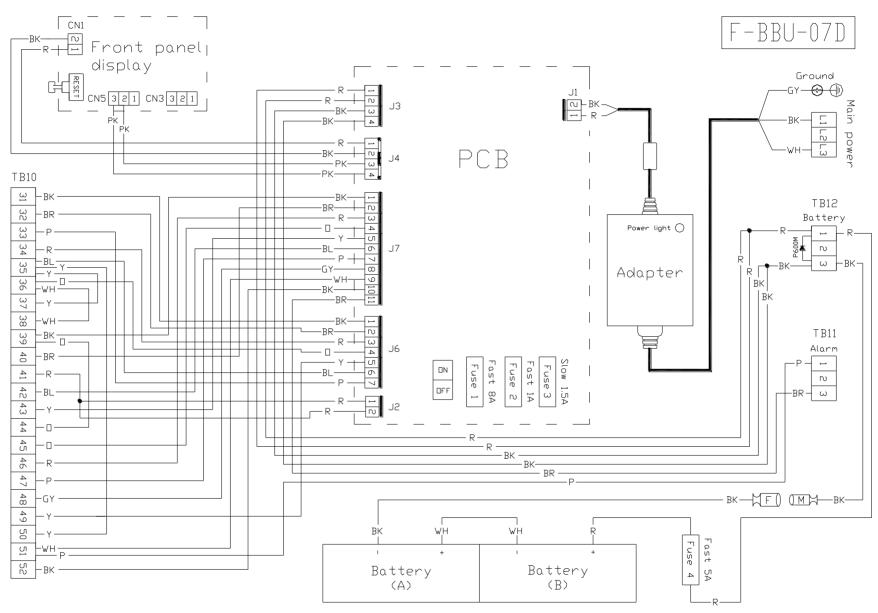

Rev:2011.07.18