
CROSSINGGARD[®] GRILLE with ThreatProtect[™]


Model ERG-TP

MEASURE THE WIDTH AND HEIGHT OF THE OPENING

SERVICE DOOR SIZE AND AREA

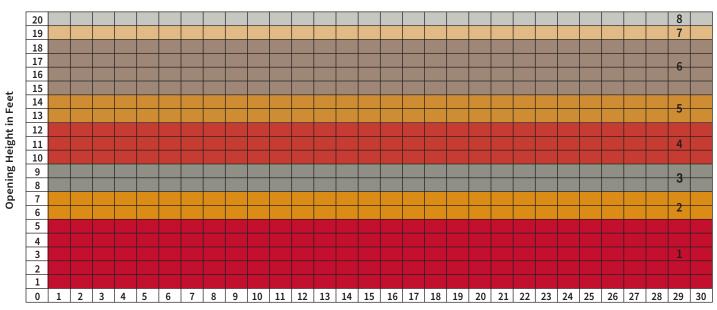

Opening Width in Feet

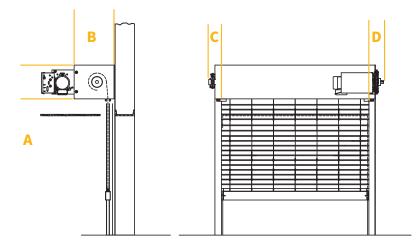

The dimensions featured on this sheet are provided as a guide. Please visit our website at www.cornelliron.com/drawings to generate drawings on demand with exact dimensions.

COMPONENT DIMENSIONS

Dimensions in Inches	8	21	23	9	7
	7	20	22	9	7
	6	19	21	9	6
	5	18	20	9	6
	4	17	19	9	6
	3	16	18	9	6
	2	15	17	9	6
	1	14	16	9	6
	Zone	А	В	С	D

Reference the zone number to view component dimensions for motorized doors.



FACE OF WALL E

1/2" ---

wall construction.

21/2"

PACKOFF

PACKOFF 21/2"

to

3¾"

21/2"

3¾"

to

Typically used with steel jambs,

or exterior side of the wall.

·3¼" to 3¾16"-

guides are mounted to the interior

BETWEEN JAMBS WITH TUBES 3x3 Typically used if there's no wall

51/2"


support, and tubes and guides

need to be recessed within the


GUIDE CONSTRUCTION OPTIONS


FACE OF WALL Z

Typically used with masonry wall construction, guides are mounted to the interior or exterior side of the wall.

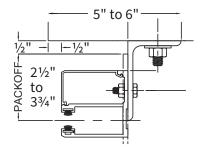



FACE OF WALL E WITH TUBES

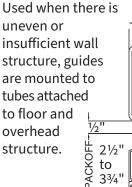

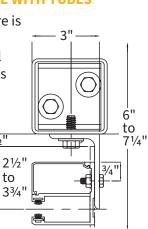


CURTAIN DESIGNS 2" Rod Spacing

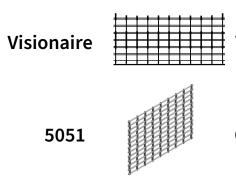

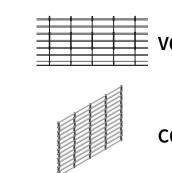


FACE OF WALL Z WITH TUBES

Used when there is uneven or insufficient wall structure, guides are mounted to tubes attached to floor and overhead structure.

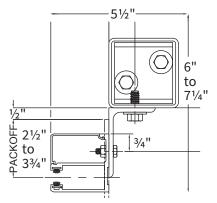

The dimensions featured on this sheet are provided as a guide. Please visit our website at www.cornelliron.com/drawings to generate drawings on demand with exact dimensions.

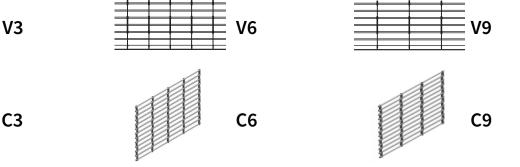



CUSTOM-DESIGNED SOLUTIONS

Contact our experienced Architectural Design Support Team for help in customizing our products to fit your specific application. architectdoorhelp.com



800.294.4358 cooksondoor.com CornellCookson, Inc. is an ISO 9001:2015 registered company 3.2023